

# Palintest

## Turbidity Expert Quick Start Guide



# Registration and Set Up

Thank you for choosing a Palintest Turbidity Expert. Please register your instrument now at <https://palintestconnect.com/> to activate your warranty.


There is product supporting information on our website at <https://www.palintest.com/products-solutions/nephelometric/> or use the QR code here:

- User Manual
- Firmware updates
- FAQs




## Getting started

Press Power Button and go to MEASURE tile.  
The onscreen TEST GUIDE gives you best practices.  
Insert the water sample and press MEASURE.  
The result will be displayed on the screen.

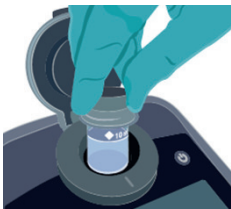

Insert sample

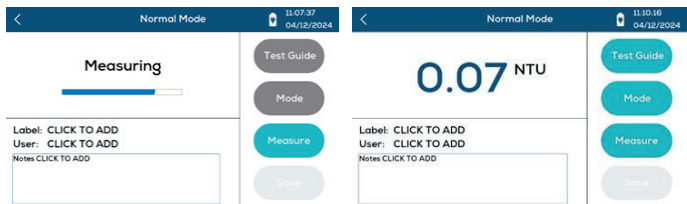

Measuring


Result




## Check Standards & Calibration

The instrument comes with set of 4 SDVB standards. These are used to verify the calibration and performance of the instrument in field.


You can also perform in field calibration using the standards to optimize your performance.

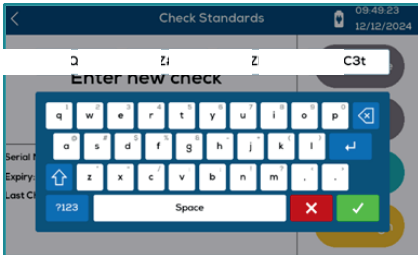


Enter Check Standards Code:

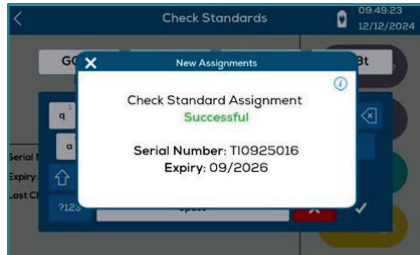

Check Standard code has been accepted

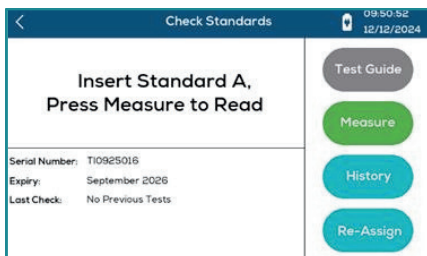

Insert Standard (pre measure)

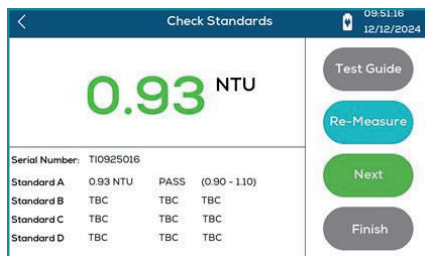

Check Standard Results

## Power & Charging

Turbidity Expert has a rechargeable battery. The kit comes with USB C cable that can be used for charging.