

# Palintest

Water Analysis Technologies

## Acid Demand

Photometric test for Acid Demand/Acid Capacity in swimming pool water

**COLOUR CHANGE**

Yellow through Green to Blue

**RANGE:**

0 - 9 mmol/L

**TECHNICAL RESOURCE:**

Acid Demand Test Method, Technical Information

01




Fill to the 10 mL line with sample.

02



Use this to "blank" the instrument. Place in cell holder and press Blank.

03

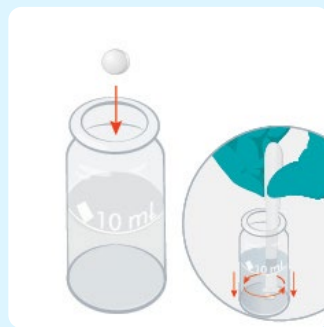

Prepare sample by adding an Alkaphot tablet. Thoroughly crush and stir, until fully dissolved.

04



Place in the cell holder and press Measure.

05



Allow timer to count down 1 minute. The Acid Demand result will then be displayed.