

# Palintest

Water Analysis Technologies

## Alkalinity, Total

Photometric test for Total Alkalinity in pool, spa, treated and natural water

**COLOUR CHANGE**

Yellow through Green to Blue

**RANGE:**

0 - 500 mg/L CaCO<sub>3</sub>

**TECHNICAL RESOURCE:**

Alkalinity Test Method, Technical Information

01




Fill to the 10 mL line with sample.

02



Use this to "blank" the instrument. Place in cell holder and press Blank.

03

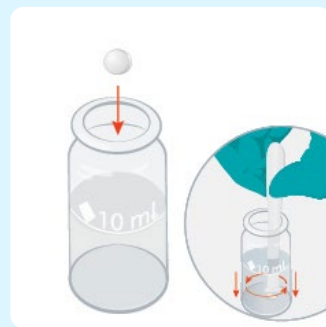

Prepare sample by adding an Alkaphot tablet. Thoroughly crush and stir, until fully dissolved.

04



Place in the cell holder and press Measure.

05



Allow timer to count down 1 minute. The concentration of Total Alkalinity will then be displayed.