

# Palintest

Water Analysis Technologies

## Bromine, Total [with Cl<sub>2</sub>]

Photometric test for Total Bromine in pool, spa and treated water, with correction if chlorine is also present

COLOUR CHANGE

Colourless to Pink

RANGE:

0 - 10 mg/L Br<sub>2</sub>

TECHNICAL RESOURCE:

[Bromine Test Method, Technical Information](#)

01




Fill to the 10 mL line with sample.

02



Use this to "blank" the instrument. Place in cell holder and press Blank.

03

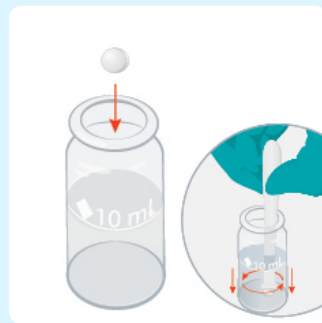

Add a Glycine tablet and crush and stir.

04



Pour a few drops of this treated sample into another clean tube. Keep the remainder.

05



Add a DPD 1 tablet to those drops. Then, crush to form a paste.

06



Pour the remaining treated sample into this tube.

07



Place the tube in the cell holder and press Measure to obtain the concentration of Total Bromine.