

# Palintest

Water Analysis Technologies

## Chlorine HR

Photometric test for Chlorine HR for disinfection applications

COLOUR CHANGE

Colourless to Yellow to Brown

RANGE:

0 - 250 mg/L Cl<sub>2</sub>

TECHNICAL RESOURCE:

[Chlorine HR Test Method, Technical Information](#)

01




Fill to the 10 mL line with sample.

02



Use this to "blank" the instrument. Place in cell holder and press Blank.

03

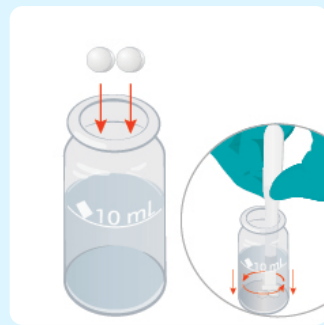

Prepare sample by adding an Acidifying GP tablet and a Chlorine HR tablet. Then, crush both tablets and stir.

04



Place the tube in the cell holder and press Measure to obtain the concentration of Total Chlorine.