

Palintest

Water Analysis Technologies

Aluminium

Photometric test for Aluminium in treated and natural water

COLOUR CHANGE

Colourless to Pink to Red

RANGE:

0 - 0.5 mg/L Al

TECHNICAL RESOURCE:

Aluminium Test Method, Technical Information

01




Fill to the 10 mL line with sample.

02



Use this to "blank" the instrument. Place in cell holder and press Blank.

03

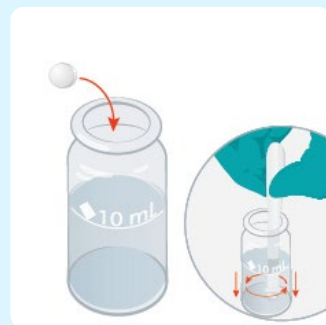


Prepare sample by adding an Aluminium No1 tablet and crush and stir.

04



Then, add an Aluminium No2 tablet. Vigorously crush and stir.

05

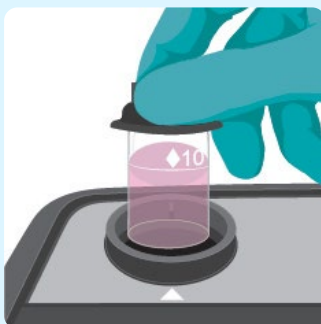

Place in the cell holder and press Measure.

06



Allow timer to count down 5 minutes. The concentration of Aluminium will then be displayed.