

Palintest

Water Analysis Technologies

Copper, Free

Photometric test for Free Copper in ground water and treated water

COLOUR CHANGE

Colourless to Purple

RANGE:

0 - 5 mg/L Cu

TECHNICAL RESOURCE:

Copper (Coppercol) Test Method, Technical Information

01




Fill to the 10 mL line with sample.

02



Use this to "blank" the instrument. Place in cell holder and press Blank.

03

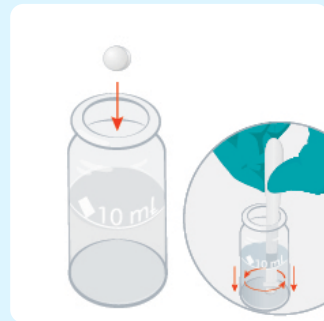

Prepare sample by adding a Coppercol No1 tablet and crush and stir.

04



Place the tube in the cell holder and press Measure to obtain the concentration of Free Copper.