

# Palintest

Water Analysis Technologies

## Nitrite LR

Photometric test for Nitrite (low range) in natural, drinking and wastewater

**COLOUR CHANGE**

Colourless to Red

**RANGE:**

0 - 0.5 mg/L N

**TECHNICAL RESOURCE:**

Nitrite (Nitricol) Test Method, Technical Information

01




Fill to the 10 mL line with sample.

02




Use this to "blank" the instrument. Place in cell holder and press Blank.

03

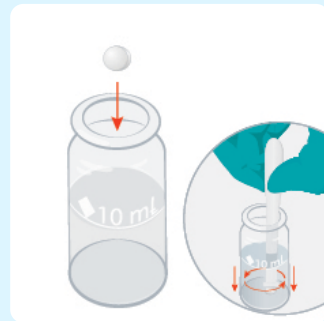


Then, add a Nitricol tablet and crush and stir.

04

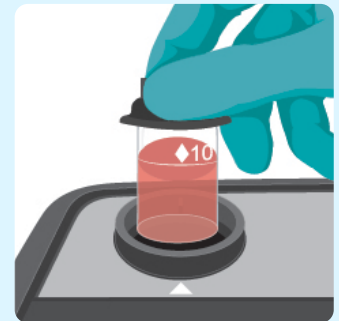

Place in the cell holder and press Measure.

05

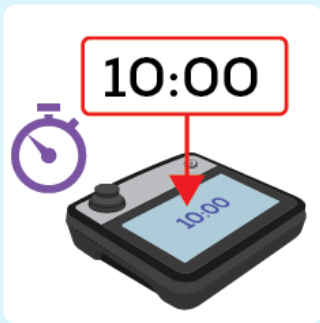

Allow timer to count down 10 minutes. The concentration of Nitrite will then be displayed.