

# Palintest

Water Analysis Technologies

## Potassium

Photometric test for Potassium in natural, drinking and treated water

**COLOUR CHANGE**

Clear to Cloudy

**RANGE:**

0 - 12 mg/L K

**TECHNICAL RESOURCE:**

Potassium Test Method, Technical Information

01




Fill to the 10 mL line with sample.

02



Use this to "blank" the instrument. Place in cell holder and press Blank.

03

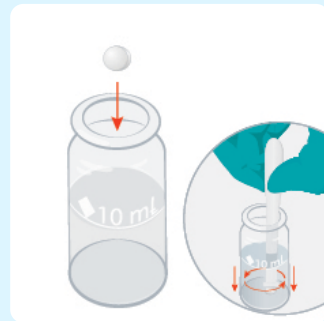

Prepare sample, by adding a Potassium K tablet. Then, crush and stir.

04



Place in the cell holder and press Measure.

05



Allow timer to count down 1 minute. The concentration of Potassium will then be displayed.