

Palintest

Water Analysis Technologies

Sulfate

Photometric test for Sulfate natural, treated and swimming pool water

COLOUR CHANGE

Clear to Cloudy

RANGE:

0 - 200 mg/L SO₄

TECHNICAL RESOURCE:

Sulfate Test Method, Technical Information

NOTES:

Sulfate tablets contain barium chloride which is extremely harmful if ingested. Avoid handling tablets and wash hands after use

01




Fill to the 10 mL line with sample.

02



Use this to "blank" the instrument. Place in cell holder and press Blank.

03

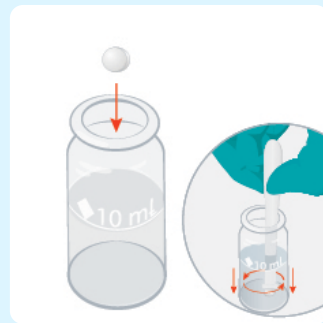

Prepare sample by adding a Sulfate Turb tablet and crush and stir.

04



Wait 1 minute. Then, stir again.

05



Place in the cell holder and press Measure to display the concentration of Sulfate.